Instructions for 8314T Bentley[™] Carpet Wand



Dear Customer:

Congratulations on the purchase of your new Bentley[™] Carpet Wand! The scene of the equipment world is becoming more high tech, and we at Mytee Products Inc. strive to keep you on the cutting edge with superior quality and technology.

With simple maintenance the Bentley[™] Carpet Wand will give quality performance for many years to come. Keep in mind that neglect or abuse to the Bentley[™] will cause unneccessary damage and void the warranty. If warranty questions arise, please get in touch with your distributor from whom you purchased this equipment.

Before first use of your new product, please read this manual thoroughly. Thank you for choosing Mytee®!

Parts & Service

Repairs, when required, should be performed by Mytee service personnel or a Mytee Authorized Service Center using original Mytee replacement parts and accessories. Please specify the Model and Serial Number when discussing your product. For a list of Authorized Mytee Service Centers, visit our website at www.mytee.com.

Pre-Operation

- 1. Vacuum and remove debris.
- 2. Pre-spray the area if desired

Operation

- 1. Attach the vacuum and solution hoses to the wand.
- 2. Turn on the extractor. If using a heated extractor, be sure to prime the pump before turning on the heater.
- 3. Begin cleaning using a back-and-forth motion.We recommend one wet pass followed by two dry passes.

After Use

- 1. Squeeze the spray lever to clear any remaining solution from the hose line.
- 2. Store indoors. In a clean, dry place.
- 2. Do not expose to freezing conditions.

Required Maintenance

You **must** lubricate the bearing mechanism on the wand head **monthly** (more often if bearing is subject to gritty waste flow that lodges in the bearing). Proper maintenance of the swivel mechanism is crucial to function of wand and preservation of the factory warranty.

- Instructions (refer to the Parts List section of this manual):
- 1. Remove swivel nut (Item #19).
- 2. Remove the swivel (Item #18) and use a rag to wipe off old grease.
- 3. Apply new, industrial grease to the swivel (Item #18) and bushing (Item #17).
- 4. Reinstall the swivel and swivel nut.

Troubleshooting

There is weak or no solution flow.


- 1. Check to make sure there is solution in your extractor.
- 2. Inspect the jets to make sure they are not clogged.


FAQs

Q: How much does the Bentley[™] Wand weigh? A: 8 lbs.


Q: Can I customize the Bentley[™] Wand to my height?

A: Yes. Please read the instructions on the following page. **Please Note:** Miscut tubing cannot be replaced and will void tubing warranty.

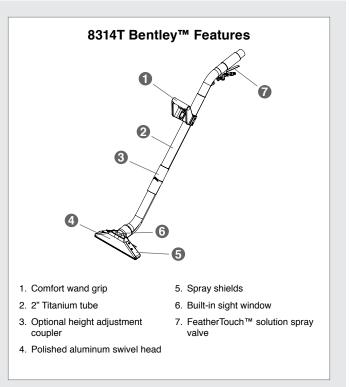

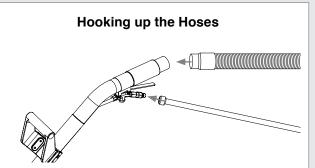


After the Vacuum Hose and Solution Hose are attached to the extractor, connect the Solution Hose to the Male Quick Disconnect, and the Vacuum Hose to wand tube.

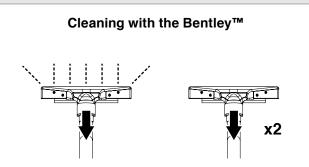

We recommend one wet pass followed by two dry passes. If using a heated extractor, this allows the machine to heat up more solution.

Size Adjustment Guide

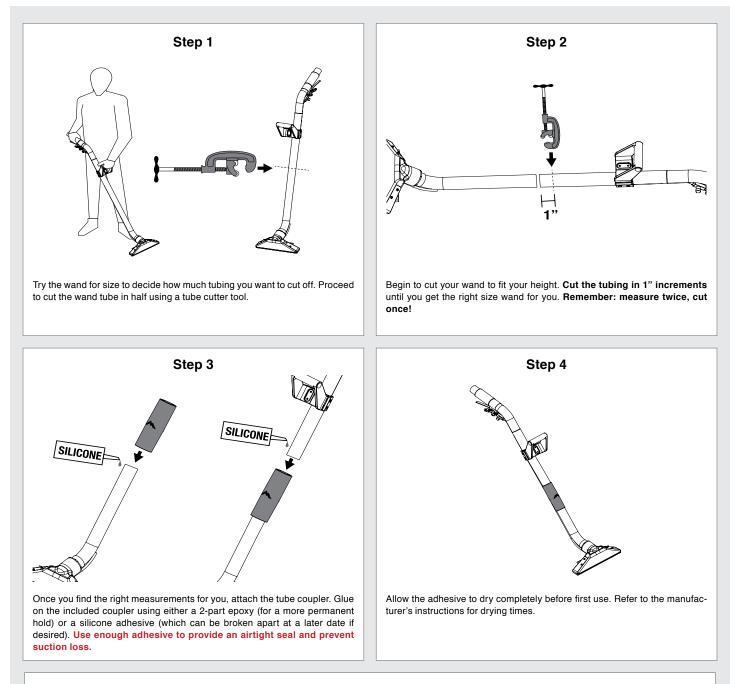

Wand Sizing Chart

The measurements in this chart are guidelines only. Keep in mind that people vary in height and arm length. We recommend cutting the tubing in 1" increments until you get the right size wand for you. **Important: Miscut tubing cannot be replaced and will void tubing warranty.**

Quick Tip: Solution Hose

After your wand has been resized, you can simply tie back any slack solution hose, or you can have the solution hose modified by a local hose company.

What should I use to cut the tubing?

Use a tubing cutter like the one pictured here. Refer to the tubing cutter's manual for instructions on how to use.



Operator Height	Cut Tubing
5'8" - 5'10"	Cut off: Approx. 8"
5'10" - 6'1"	Cut off: Approx. 4"

Parts List & Pricing

